

Bullseye Temp Probe Setting

Not published anywhere so I thought I'd provide Rec Teq's instructions..... I can confirm it worked.

Press and hold the Up Arrow and Temp Display at the same time until 65 pops up and the red light is on Set Point, this is the Minimum Feed Rate Setting.

Once you press the Temp Display button the red light will move to Actual and the screen should read 0, this is the Offset feature.

Press Temp Display again and the red light will move to Meat, this is the Meat Probe Calibration. (Meat Probe ranges are +10 and – 10) Use the Up and Down arrows to adjust all the settings – pressing the Temp Display button continuously will cycle between these three screens in a loop.

To Exit settings, simply press Power.