

Test Mode

Press and hold the **Temp Display** button and the **Down Arrow** at the same time.

8888 will appear on the screen. Once it does, let go.

Click **Temp Display** and 01.01 will appear, press **Temp Display** again to get to 5-1.

Now press the **Power Button** to move to 5-2.


Next, press the **Down Arrow** for 5-3.

Then the **Up Arrow** for 5-4.

And finally, the **Temp Display**, now you should see IGN.

Using **Temp Display** scroll through IGN – AUG – FAN – RTD Test – MEAT PROBE Test – and finally BYE.

Hitting **Temp Display** while you're on BYE will take you out of Test Mode.

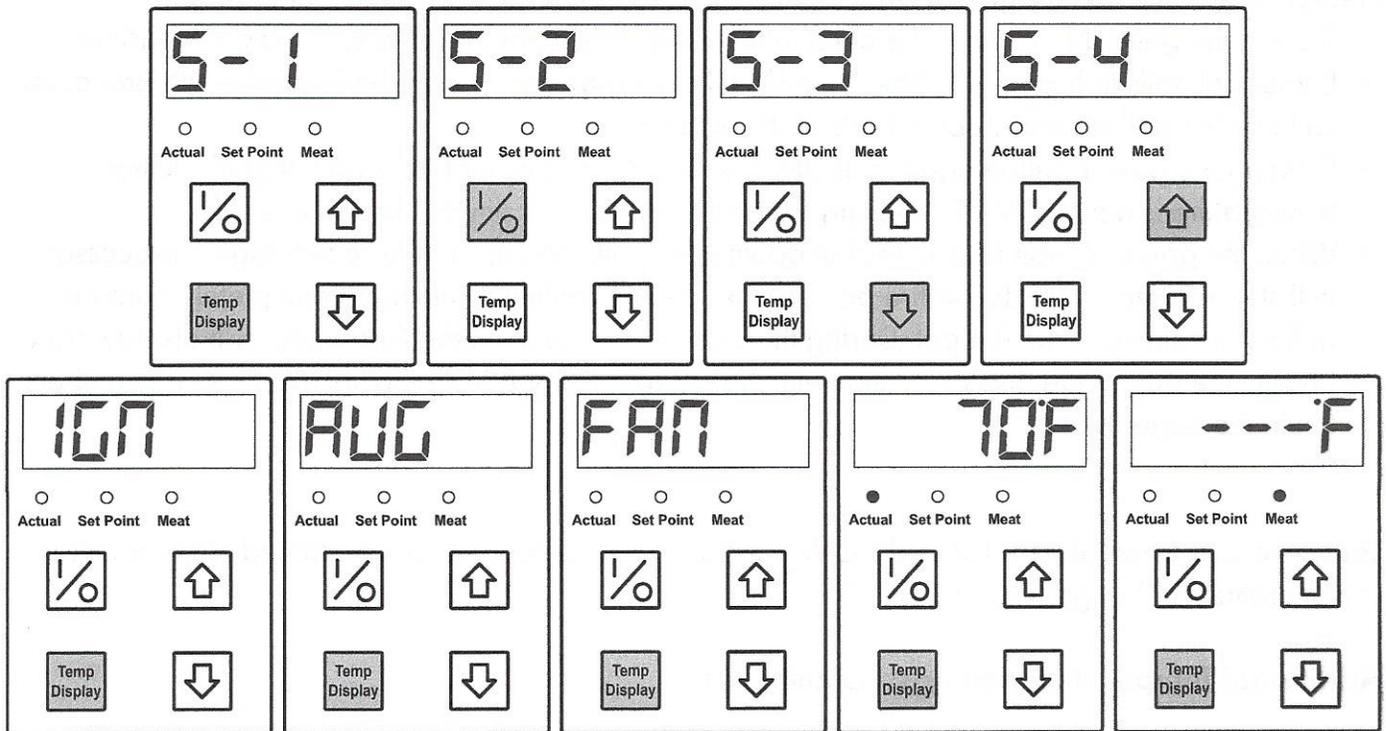

Settings

Press and hold the **Up Arrow** and **Temp Display** at the same time until 65 pops up and the red light is on **Set Point**, this is the Minimum Feed Rate Setting. (The ranges of the minimum feed rate on the Bullseye Controller is 30 – 250, treat these like all other grills and keep all controllers at either 30 or 65.)

Once you press the **Temp Display** button the red light will move to **Actual** and the screen should read 0, this is the Offset feature. (Offset ranges are +20 and – 20)

Press **Temp Display** again and the red light will move to **Meat**, this is the Meat Probe Calibration. (Meat Probe ranges are +10 and – 10)

Use the **Up and Down arrows** to adjust all the settings – pressing the **Temp Display** button continuously will cycle between these three screens in a loop.

To Exit settings, simply press **Power**.